



INSTRUCTIONS 3 WAY CONTINUOUS AIR PULSE CONTROLLER

This basic system requires 240VAC and Air connection to operate. Once power is turned on it will begin to cycle continuously. The pulse width and time between pulses are adjustable as follows.

TO CHANGE THE TIME BETWEEN PULSES.

1. PRESS THE 'ESC' KEY ON THE SMART RELAY.
2. USE THE ARROWS TO SCROLL DOWN TO THE 'SET PARAMETERS' OPTION AND PRESS THE 'OK' KEY
3. IN THE 'B01:Par' MENU PRESS 'OK'
4. THIS SELECTS THE 'TH=xx.xxS' OPTION WHICH IS THE TIME PERIOD BETWEEN PULSES
5. CHANGE THE VALUE USING THE UP AND DOWN ARROWS TO THE REQUIRED PERIOD AND THEN PRESS THE 'OK' KEY TO CONFIRM THE SELECTION
6. PRESS THE 'ESC' KEY TWICE TO RETURN TO THE TIME AND DATE SCREEN

TO CHANGE THE PULSE LENGTH

1. PRESS THE 'ESC' KEY ON THE SMART RELAY
2. USE THE ARROWS TO SCROLL DOWN TO THE 'SET PARAMETERS' OPTION AND PRESS THE 'OK' KEY
3. USE THE DOWN ARROW TO SCROLL THE MENUS UNTIL 'B03:T' IS REACHED
4. PRESS THE 'OK' KEY TO SELECT 'T=xx.xxS' THIS IS THE LENGTH OF PULSE ON THE FIRST SOLENOID
5. USE THE ARROWS TO CHANGE THE VALUE TO THE REQUIRED SETTING AND PRESS THE 'OK' KEY TO CONFIRM
6. THIS MUST BE REPEATED FOR MENUS 'B04:T' AND 'B06:T' AS THESE ADJUST THE LENGTH OF PULSE OF THE REMAINING SOLENOIDS. USE THE DOWN ARROW TO MOVE BETWEEN MENUS.
7. WHEN COMPLETE HIT THE 'ESC' KEY TWICE TO RETURN TO THE TIME AND DATE SCREEN

Eurofilter Asia Pacific
Ph.1300 736071
Fax.1300 736986
info@ecsfiltration.com.au